

**READ CAREFULLY BEFORE INSTALLING THE FIXTURE.
KEEP THE INSTRUCTION FOR FUTURE REFERENCE.**

Lightide emergency LED lights must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. User may use accessories and spare parts (provided together with products) for installation.

Warning

RISK OF ELECTRIC SHOCK. Make sure power supply is OFF before installing or maintaining fixture. No user serviceable parts inside. Never perform maintenance or cleaning while fixture is energized. Disconnect power and allow fixture to cool before maintaining.

Installation Instruction

Check if the input voltage matches with label of products.

Step 1: Install the prepared hooks (not included) on the ceiling. Before installation, please ensure that the mounting hooks bear at least 3 times the weight of the fixture. Screw the circular ring tightly.

Step 2: Screw the included hanging ring clockwise into the hole on the top of fixture, and then tighten the hanging ring bolt to ensure that the hanging ring won't come off.

Step 3: Then hang the fixture on the hook.

Step 4:


- Install waterproof nut on the J-Box to protect AC line.
- Connect the brown/black line of the AC input line separately with the live line and the Neutral line of the main supply. The yellow-green ground wire must be earthed inside of the junction box.
- Connect two battery connectors to keep battery work.
- Emergency Test: Press test switch on the side of battery to make sure the emergency work normally.

Cautions

- MIN 75°C SUPPLY CONDUCTOR
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND HAZARDS INVOLVED.
- PLEASE CHARGE THE LUMINAIRES FOR AT LEAST 24 HOURS BEFORE USING EMERGENCY MODE.

In case of any change for the products, Lightide will keep the right to inform to our customers in advance.

Wire Diagram

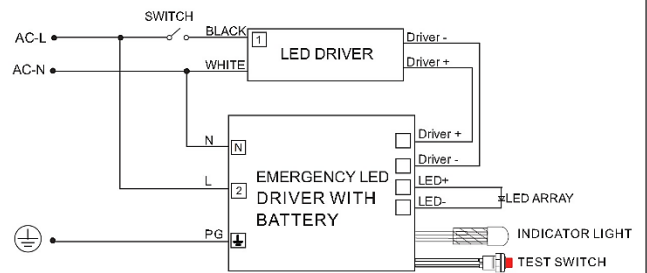



What's In The Box

- One (1) UFO LED High Bay Fixture
- One (1) Hanging Ring
- One (1) Waterproof Nut
- One (1) Manual



Tools Needed

This LED High Bay requires very few tools for installation. A screwdriver and a pair of wire-cutter will help to install the hook and fasten the hanging ring.

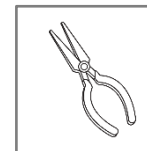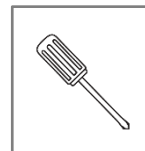

Installation

